

molex®

ENGINEERING SPECIFICATION

INSTALLATION INSTRUCTION SHEETS

1.0 SCOPE

This specification consists of installation instructions for wire taps.

2.0 PURPOSE

To clarify installation instructions for end users of wire taps.

3.0 REFERENCE MATERIAL NUMBERS

See page 2 for the actual instruction sheets. This page can be used as originals when cut into fourths.

4.0 DEFINITIONS

Not applicable.

5.0 PROCEDURES

Place one (1) instruction sheet (1/4 of next sheet) in the smallest unit container.

6.0 IMPLEMENTATION

August 10, 2010

SD-19216-008		ETHRODAHL/ DMYRICK	JMACNEIL	JMACNEIL		ì
DOCUMENT NUMBER:		CREATED / REVISED BY:	CHECKED BY:	APPROVED BY:		ì
D	DATE: 2022 / 07 / 20	22 THROUGH 12 AWG WIRE			1 of 2	İ
D	EC No: 715017	WIRE TAP INSTALLATION INSTRUCTIONS			1 -4 2	ĺ
REVISION:	ECR/ECN INFORMATION:	IIILE:			SHEET No.	ı

TEMPLATE FILENAME: ENGINEERING_SPEC[SIZE_A](V.1).DOC



Assembly Instructions for Wire Tap Splices

Wire Range Engineering P/N WT-2218 22-18 AWG WT-1814 18-14 AWG WT-12 12 AWG

NOTICE

OPTIMAL STORAGE CONDITION

23-25°C (73-77°F) 50% minimum relative humidity

For use with only stranded copper wire and copper alloy tabs 600V, 105°C




For 22-16 AWG wires, refer to Fig. 1

- 1. Insert the correct size wire properly into the connector.
- 2. Position the connector into the tongue-and-groove pliers as shown and carefully squeeze until the latch engages.

For 14-12 AWG wires, refer to Fig. 2, 3, and 1.

- 1. Bend the wire support membranes outward with wire (Fig.2)
- 2. Place the correct size wire into the nest of the metal and gently squeeze the wire into position with tongue-and-groove pliers without distorting (flattening) the wire insulation (Fig.3).
- 3. Position the connector into the tongue-and-groove pliers as shown and carefully squeeze until the latch engages (Fig.1).

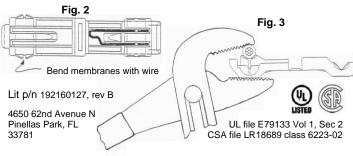

one company > a world of innovation

Assembly Instructions for Wire Tap Splices

Engineering P/N Wire Range 22-18 AWG WT-2218 WT-1814 18-14 AWG WT-12 12 AWG For use with only stranded copper wire and copper alloy tabs 600V, 105°C Fig.1




OPTIMAL STORAGE CONDITION climate controlled en 23-25°C (73-77°F) 50% minimum relative humidity

For 22-16 AWG wires, refer to Fig. 1

- 1. Insert the correct size wire properly into the connector.
- 2. Position the connector into the tongue-and-groove pliers as shown and carefully squeeze until the latch engages.

For 14-12 AWG wires, refer to Fig. 2, 3, and 1.

- 1. Bend the wire support membranes outward with wire (Fig.2)
- 2. Place the correct size wire into the nest of the metal and gently squeeze the wire into position with tongue-and-groove pliers without distorting (flattening) the wire insulation (Fig.3).
- 3. Position the connector into the tongue-and-groove pliers as shown and carefully squeeze until the latch engages (Fig.1).

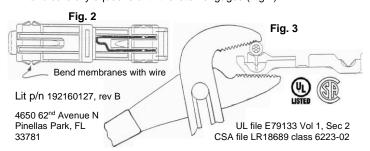



Assembly Instructions for Wire Tap Splices

Wire Range Engineering P/N WT-2218 22-18 AWG WT-1814 18-14 AWG WT-12 12 AWG

For use with only stranded copper wire and copper alloy tabs 600V, 105°C Fig.1 NOTICE


OPTIMAL STORAGE CONDITION Store in climate controlled enviro 23-25°C (73-77°F) 50% minimum relative humidity

For 22-16 AWG wires, refer to Fig. 1

- 1. Insert the correct size wire properly into the connector.
- 2. Position the connector into the tongue-and-groove pliers as shown and carefully squeeze until the latch engages.

For 14-12 AWG wires, refer to Fig. 2, 3, and 1.

- 1. Bend the wire support membranes outward with wire (Fig.2)
- 2. Place the correct size wire into the nest of the metal and gently squeeze the wire into position with tongue-and-groove pliers without distorting (flattening) the wire insulation (Fig.3).
- 3. Position the connector into the tongue-and-groove pliers as shown and carefully squeeze until the latch engages (Fig.1).

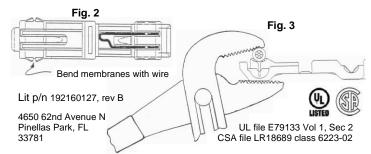

one company > a world of innovation

Assembly Instructions for Wire Tap Splices

Engineering P/N Wire Range WT-2218 22-18 AWG WT-1814 18-14 AWG WT-12 **12 AWG** For use with only stranded copper wire and



copper alloy tabs 600V, 105°C

limate controlled env 23-25°C (73-77°F) 50% minimum relative humidity

Fig.1 For 22-16 AWG wires, refer to Fig. 1

- 1. Insert the correct size wire properly into the connector.
- 2. Position the connector into the tongue-and-groove pliers as shown and carefully squeeze until the latch engages.

For 14-12 AWG wires, refer to Fig. 2, 3, and 1.

- 1. Bend the wire support membranes outward with wire (Fig.2)
- 2. Place the correct size wire into the nest of the metal and gently squeeze the wire into position with tongue-and-groove pliers without distorting (flattening) the wire insulation (Fig.3).
- 3. Position the connector into the tongue-and-groove pliers as shown and carefully squeeze until the latch engages (Fig.1).

